



ENGLISH



NARROW IRONING TABLE

- **HSL-BBP-03K**
- **HSL-BP-03K**
- **HSL-VUP-03K**
- **HSL-VUP-03S**



OPERATING MANUAL



ISO 9001:2000



CONTENTS

Manufacturer Information:	3
Meaning of Safety Symbols:	4
Description And Intended Use:	5
Technical Specifications:	6
Technique Drafting:	7
Part List:	8
Storage:	8
Transport And Handling:	9
General Safety Precautions:	9-10
Mounting Instructions:	10
Using Instructions:	11-12
Maintenance Instructions:	12
Trouble Fixing:	13

MANUFACTURER INFORMATION

Dear Customer,

Firstly, congratulations for your selection. Hasel have been manufactured industrial type ironing machines since 1985 in Turkey. In production stage Hasel concerns about high quality, low price with no compensation of quality and no harm to nature.

This manual contains information about usage of HSL-GP-03S, HSL-GP-03K, HSL-GP-03KI. This information intended to help operator. Any problems/questions about this manual should be informed to our head office to obtain necessary information by e-mail or telephone.

MANUFACTURER: HASEL ÜTÜ SAN. ve TİC.LTD. ŞTİ

FACTORY: İkitelli Organize San. Böl. Demirciler San. Sit.B2
Blok No: 71- 72 Başakşehir –İstanbul / TURKEY

Tel: +90 212 671 32 43

Tel:+90 212 671 41 02

Tel:+90 212 520 74 40

Fax:+90 212 671 32 44

WEB: <http://www.haselutu.com.tr>

E- MAIL: info@haselutu.com.tr

DEAR CUSTOMER,

To obtain the highest efficiency from this product please read this manual thoroughly before operating the product and retain it for future reference.

MEANING OF SAFETY SYMBOL



**Read the manual
before use**



**Repairs should be made
by Qualified Person only**



Electricity



High Temperature



Main Grounding



Internal Grounding



**Stop the machine
Before maintenance**

DESCRIPTION AND INTENDED USE

Product Name: Narrow Ironing table within Vacuum and Air-blowing

Model No:

- **HSL-VUP-03S:** Vacuum, Air-Blowing
- **HSL-VUP-03K:** Vacuum, Air-Blowing, Swivel Arm
- **HSL-BP-03K:** Vacuum, Air-Blowing, Swivel Arm, Chimney
- **HSL-BBP-03K:** Vacuum, Air-Blowing, Swivel Arm, Chimney, Lighting

HSL-VUP-03S, HSL-VUP-03K, HSL-BP-03K and HSL-BBP-03K are wide type ironing tables. Used for ironing all types of clothes. Models with arm, makes ironing easier and better for arms of clothes.

Using machine with the exception of above determined condition eliminates manufacturer's responsible for damage and injury.


TECHNICAL SPECIFICATIONS

TYPE	HSL-VUP-03S	HSL-VUP-03K
Voltage	400 V ~3 NPE	400 V ~3 NPE
Frequency	50 Hz	50 Hz
Total Power	2,5 kW	2,5kW
Vacuum Motor	0,55 Kw	0,55 Kw
Blowing Motor	0,55 Kw	0,37 Kw
Table Heating El.	1,5 kW	1,5 kW
Arm Heating El.	-----	-----
IP Code	Ip 54	Ip 54
Dimensions	80*140*92 cm	90*140*92cm
Weight	55 kg	61 kg

TYPE	HSL-BP-03K	HSL-BBP-03K
Voltage	400 V ~3 NPE	400 V ~3 NPE
Frequency	50 Hz	50 Hz
Total Power	2,5 kW	2,5 kW
Vacuum Motor	0,55 kW	0,55 kW
Blowing Motor	0,55 Kw	0,55 Kw
Table Heating El.	1,5 kW	1,5 kW
Arm Heating El.	-----	-----
IP Code	Ip 54	Ip 54
Dimensions	90*140*92cm	90*140*92cm
Weight	61 kg	61 kg

(arm heating resistance 0,5 kW)

TECHNIQUE DRAFTING

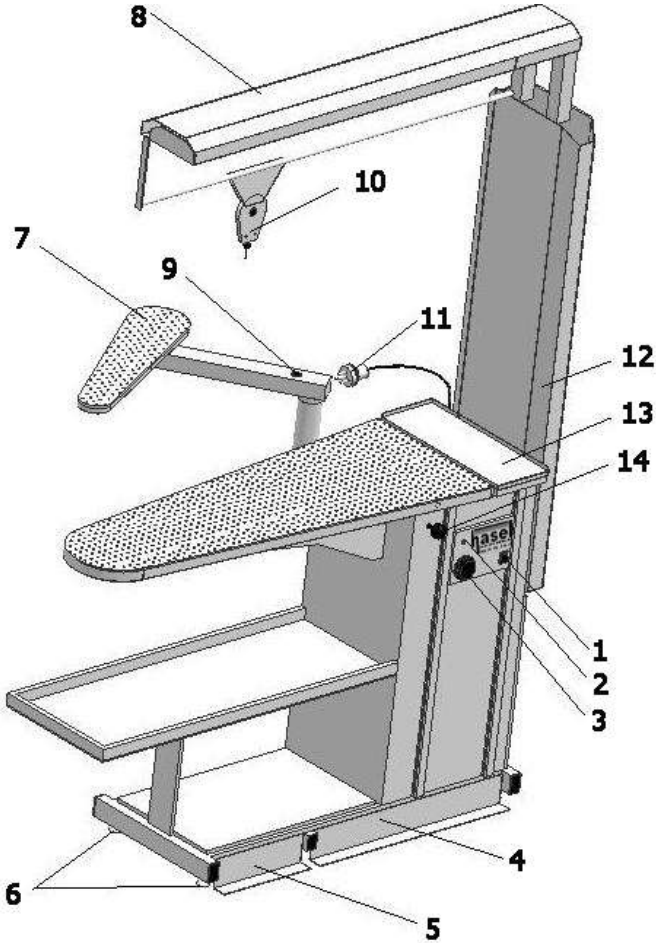

PART LIST

PART NAME	NO
Main Switch	1
Thermostat Signal Lamp	2
Thermostat	3
Vacuum Pedal	4
Blowing Pedal	5
Feet	6
Swivel Arm	7
Lighting	8
Arm Heating Switch	9
Balancer	10
Plug	11
Chimney	12
Seat For Iron	13
Changing Rod For Vacuuming and Blowing	14

STORAGE

Store the packed machine in an appropriate place, protected and not subject to bad weather. For a temporary lack of usage, clean it carefully and cover it with a cloth. Never subject to bad weather.

TRANSPORT AND HANDLING

To avoid damages to machine, people and environment, take the maximum attention and care during handling of the machine. Comply with the precautions necessary and marked on the cards on the packing and follow chapters carefully.

Unpacking and Handling

Machine is packed in two ways

- Wrapped by thick nylon or
- Placed in a wooden cage.

If the machine is wrapped by a nylon cover, by putting on transpalette or lifting up; carry it to where you want to place.

If the machine placed in a wooden cage, remove the straps and take it out of the wooden structure. By putting on transpalette or lifting up; carry it to where you want to place.

GENERAL SAFETY PRECAUTIONS



When using power tools, the following basic safety measures are to be observed to protect against electrical shock, personal injury and risk of fire.

Safe operation is enabling only if the operation manual is read entirely before attempting to operate the machine and all the content is conformed.

- Disorder in the working area increases risk of an accident.

GENERAL SAFETY PRECAUTIONS

- Provide good lighting.
- During any operation or fixing on the machine please take care and consider all the precautions which is pointed on warning signs and labels. All warning labels which are placed on machine, meanings were pointed above. Please pay attention.
- This machine is in accordance with the relevant safety regulations. Repairs must be performed only by an electrical specialist, otherwise accidents can result for the operator.
- Do not work the machine when it is out of its usage limits.
- Use the identified spare parts and accessories in order to improve the security
- If it is necessary change the damaged parts with the original ones. The manufacturer is not responsible any damage or injury because of using unoriginal parts.
- Fix the machine to contact arm for protection grounding. If the machine is not earthed manufacturer doesn't bear responsibility for any damage or injury occurred by lack of grounding.
- The power cable must be placed properly in order to prevent being stepped on or being put anything on it. Check the cable especially at out going points and connection points. Be careful not to allow any bending or bowing on the cable
- If the cable is damaged turn off the main switch. Do not allow the machine to work with damaged cable. Let the authorized electrician shift the cable.
- User should not leave the machine alone while it is working.
- After ironing, place hand iron on the hand iron mat.
- Do not work machine upper 120°C long time. Table cover can be burned.

IF THE USERS DO NOT FOLLOW THE CAUTIONS LISTED ABOVE MANUFACTURER WILL NOT BE RESPONSIBLE OF ANY ACCIDENT AND INJURIES

MOUNTING INSTRUCTIONS

- Prepare a panel near to machine on the wall with 16 A an automatic fuse, and earthed socket suitable for 400 V AC 50 Hz.
- Put the plug (11) on the socket.



Let a qualified electrician prepare the electric connections of the Machine. Your cable connection must be as it's written in the mounting instruction. Your machine can get trouble by low or high voltage, and this situation is not in guarantee. You can obviate the low or high voltage by using an automatic voltage regulator.

USING INSTRUCTIONS

- Usage of Counter Tables
 1. Open the main switch (2).
 2. Turn the heater thermostat (3) Adjust working temperature by using the table heater thermostat and don't exceed 120 °C. Do not forget if machine works upper 120 °C long time, table cloth can be burned.
 3. For vacuuming just press the vacuum pedal (6), as long as you press pedal, you can get vacuuming.



Do not forget vacuuming continuously. This situation causes to get upper table wet by cooling and break motor down by warming extremely.

USING INSTRUCTION

- **Usage of Swivel Arm**

1. Pull swivel arm (9) on table.
2. Pull changing rod (5) to your direction for vacuuming.
3. For vacuuming just pres the vacuum pedal (6).
4. Kol ısıtmalı modellerde kol ısıtması isteniyorsa anahtarı(10) açınız.

MAINTENANCE INSTRUCTIONS

Before repairing operation turn the main switch (1) absolutely off.

If you take away the protective parts during the maintenance, you have to careful not to touch hot places. Certainly you must turn off the electricity and steam out.

- End of working , turn the main switch.(1)
- Change table cloth when necessary.

TROUBLE FIXING

PROBLEM	CAUSE	CHECKS
THE UPPER PLATE IS NOT GETTING HOT	*Table surface heating element may be broken. *Thermostat (3) may be broken	*Call the service
	*Thermostat (3) may be switch off	*Control thermostat adjustment
THE UPPER PLATE IS GETTING VERY HOT	*Thermostat (3) may be broken	*Call the service
	*Thermostat adjustment may be high.	*Control thermostat adjustment
MOTOR DOES NOT MAKE VACUUMING	*Pedal switch may be broken. *Main switch(1) may be broken	*Call the service
	*Motor may be turning wrong direction.	*Call electrician to check electricity connection to wall fuse.
MOTOR WORKS LOUDLY	*Motor fan maybe broken.	*Call the service
	*Motor may be turning wrong direction.	*Call electrician to check electricity connection to wall fuse.
THE UPPER PLATE IS GETTING VERY HOT	*Thermostat (3) may be broken	*Call the service

CERTIFICATE



for the management system according to ISO 9001:2008

The proof of the conforming application with the regulation was furnished and in accordance with certification procedure it is certified for the company

HASEL ÜTÜ SAN. VE TİC. LTD. ŞTİ.
İkitelli Org. San. Böl. Demirciler San. Sit. B2 Blok No:71-72
Başakşehir - İstanbul / Turkey

Scope

Manufacturing and sales of textile and confection ironing machineries

Certificate Registration No.: TIC 15 100 128158

Valid until: 2015-10-01
Valid from: 2012-10-02

Audit Report No.: 3330 2KKJ A0

This certification was conducted in accordance with the TIC auditing and certification procedures and is subject to regular surveillance audits.

A. Drexel

TÜV Thüringen e.V.
Certification body for
systems and personnel



Jena, 2012-10-02



DGA-ZM-03-06-00



Original certificates
are branded with a hologram.

The current validity can be demanded at our homepage www.tuev-thueringen.de

Zertifizierungsstelle des TÜV Thüringen e.V. • Eintr.-Ruska-Ring 6 • D-07745 Jena • ☎ +49 3641 399740 • ✉ zertifizierung@tuev-thueringen.de



MEYER INTERNATIONAL CONFORMITY ASSESSMENT SERVICES

CERTIFICATE OF CONFORMITY



EC Council Directive 98/37/EC Machinery Safety Directive

Certificate No.: 0806-MAK-011

This is to certify the product:

"COMBINE IRONING BOARDS"

Models:

HSL-KS-01

Manufactured by

HASEL ÜTÜ SANAYİ VE TİC.LTD.ŞTİ.

at

İkitelli Org. San. Böl. Demirciler San Sit. B5 Blok No: 116

Küçükçekmece - İstanbul / TÜRKİYE

Complies with the requirements of MEYER Product Certification Procedures

Hakan Esgin

Technical Manager-Product Service



11 June 2008

İSTANBUL-TÜRKİYE

The manufacturer's technical documentation and product has been reviewed and found to comply with the requirements of MEYER Product Certification Procedure. This certificate of conformity is based on the evaluation of mentioned product given above. Manufacturer/applicant is responsible for maintaining the responsibilities of the relevant regulations. Any significant changes on design or construction of the product or amendments to the relevant directives or standards referred above render this certificate invalid.

İMALATÇI/MANUFACTURER: HASEL ÜTÜ SAN. TİC. LTD.ŞTİ.
FABRİKA/FACTORY: İkitelli Organize San. Böl. Demirciler San. Sit.B2
Blok No: 71-72 Basakşehir –İstanbul/ TURKEY
Tel1: +90 212 671 32 43
Tel2: +90 212 671 41 02
Fax: +90 212 671 32 44
WEB: <http://www.haselutu.com.tr>
E- MAIL: info@haselutu.com.tr