



User manual Washer Extractor WE1100P



Original instructions



Electrolux
PROFESSIONAL

0020506871D/EN-1

2019.09.17

Contents

1	Safety Information	5
1.1	Children and vulnerable people safety	5
1.2	Installation	5
1.3	Electrical Connection	6
1.4	Water connection	6
1.5	Use	6
1.6	Care and cleaning	7
1.7	Service	7
1.8	Disposal	7
2	Product Description	8
2.1	Appliance overview	8
2.2	Accessories	9
2.3	Installation on suspended flooring	9
2.4	Available from your authorized vendor	9
3	Before First Use	10
4	Control Panel	10
4.1	Control panel description	10
4.2	Display	11
5	Programmes	11
6	Daily Use	12
6.1	Loading the laundry	12
6.2	Detergent compartments	12
7	Hints And Tips	13
7.1	The laundry load	13
7.2	Stubborn stains	13
7.3	Detergents and additives	13
7.4	Ecological hints	13
7.5	Water hardness	14
8	Care And Cleanning	14
8.1	External cleaning	14
8.2	Descaling	14
8.3	Maintenance wash	14
8.4	Door seal	14
8.5	Cleaning the drum	15
8.6	Cleaning the detergent dispenser	15
8.7	Cleaning the drain filter	16
8.8	Cleaning the inlet hoses and the valve filters	16
8.9	Frost precautions	17
9	Trouble Shooting	17
9.1	Introduction	17
9.2	Possible failures	17
10	Emergency Door Opening	18
11	Technical Data	19
12	Environment Concerns	19
13	Fault Codes	20

The manufacturer reserves the right to make changes to design and component specifications.

We are thinking of you

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

Customer Care and Service

Always use original spare parts.

When contacting our Authorized Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.  Read the instructions before using the appliance Warning / Caution-Safety information.

 General information and tips Environmental information Subject to change without notice.

1 Safety Information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages.

Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children less than 3 years of age should be kept away unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- Cleaning and user maintenance shall not be made by children without supervision.

1.2 Installation

- Obey the installation instruction supplied with the appliance.
- Make sure that the appliance is stable during transportation.
- Make sure that the appliance is disconnected from the electricity supply during installation, maintenance and repairs and cannot be reconnected until all work has been carried out.
- Remove all the packaging and the transit bolts.
- Keep the transit bolts. When you move the appliance again you must block the drum.
- Always be careful when you move the appliance because it is heavy. Always wear safety personal protective equipment.
- This appliance is for indoor use only.
- Do not install or use a damaged appliance.
- Do not install or use the appliance where there is risk of freezing or where it is exposed to the weather (e.g. Directly to the sunlight, humid and dusty location).

1.3 Electrical Connection

- The appliance must be correctly earthed. The manufacturer is not responsible for the consequences of an inadequate earth system.
- Always use a correctly installed shockproof socket.
- Make sure that the electrical information on the rating plate agrees with the power supply.
If not, contact an electrician.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorized Service Centre or similarly qualified persons in order to avoid a hazard.
- Connect the mains plug to the mains socket only at the end of the installation.
Make sure that there is access to the mains plug after the installation.
- Do not touch the mains cable or the mains plug with wet hands.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

1.4 Water connection

- Make sure not to cause damage to the water hoses.
- The appliance is to be connected to the water mains using the new supplied hose-sets.
Old hose sets must not be reused.
- Before you connect the appliance to new pipes or pipes not used for a long time,
let the water flow until it is clean.
- The operating water pressure (minimum and maximum) must be between 0,5bar (0,05 MPa)
and 8 bar (0,8 MPa).
- The first time you use the appliance, make sure that there is no leakage.

1.5 Use

- Do not change the specification of this appliance.
- Obey the safety instructions on the detergent packaging.
- Obey the maximum load volume of 12 kg.
- Do not put flammable products or items that are wet with flammable products in,
near or on the appliance.

- Make sure that you remove all metal objects from the laundry.
- Do not put a container to collect possible water leakage under the appliance. Contact the Authorized Service Centre to ensure which accessories can be used.
- Do not touch the glass of the door while a program operates. The glass can be hot.

1.6 Care and cleaning

Disconnect the mains plug from the mains socket.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

1.7 Service

- Only original spare parts can ensure the safety standards of the appliance.
- Only repairs undertaken by an Electrolux approved service technician are covered by the guarantee.

1.8 Disposal

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.