



# myPROzip

## Smart Professional Dryer

### Especially designed for small businesses.

The machine with a Professional heart, on a sensible budget, boasting benefits from a professional design.

### Benefits and features

- ▶ **Superb capacity and performance:**
  - Process all laundry in one go thanks to generous 8 kg capacity
- ▶ **Outstanding flexibility and garment care:**
  - Two drying temperature options (low and medium)
  - Prevent over-drying of garments and save time and energy with professional Residual Moisture Control technology
  - Greater peace of mind: optional direct connection from condensed water tank to drain for instant discharge
- ▶ **Triple the lifetime<sup>1</sup>:**
  - Extra long lifetime due to more durable machine construction with professional components
  - Less vibration and noise: below 70 dB based on specially designed transmission system, condenser and panelling
  - No chemical corrosion: stainless steel front and top
- ▶ **Prepared for connection to external payment systems**

### Perfect for small operations such as

- Small hotels and bed & breakfasts (guest use)
- Out-of-home resident services
- Camping, marina, petrol stations, student houses

### Accessories

- ▶ Pedestal
- ▶ Stacking kit
- ▶ Coin meter

### Option

- ▶ Marine kit

<sup>1</sup> Compared to domestic machines

### Main specifications at a glance


Drying capacity, kg	8
Drum volume, l	120
Condensation efficiency	A (> 90%)

### Consumption data

Program standard, cotton 60 °C, full load

Total time, min./cycle	129
Energy consumption, kWh	4.88
Annual energy consumption, kWh	560

### Dimensions

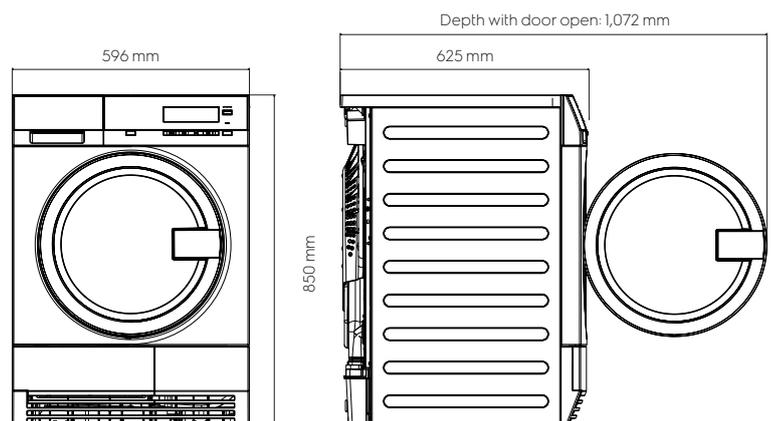

# myPROzip Smart Professional Dryer

## Specifications TE1120P

Drying technology	Condense (Electric Heating Elements)
Electrical connection, V/ Hz/W	230 - 240/ 50-60/2600 * *(1900 + 700)
Declared drying noise, dB(A)	< 70
Display	Large LCD
Drum light	Yes
Door lock device	Pull to open with child safety (can be opened from inside by applying force of 70N)
Filter	Filter with handle for easier removal
Filter sensor	The machine does not start if the filter is not in position (preserve machine integrity)
Levelling feet	4 adjustable feet (adjustable by 15mm)

## Programs




Number of programs/temperatures	2
	Low Medium

## Special features

Pedestal	Accessory
Stacking kit	Accessory
Coin meter	Accessory
Marine kit	Optional
Prepared for connection to external payment systems	Standard

## Dimensions including the door frame

Height (A), mm	850
Width (B), mm	596
Depth (C), mm	625
Packaging height, mm	890
Packaging width, mm	630
Packaging depth, mm	705
Weight (with packaging), kg	44 (45.5)

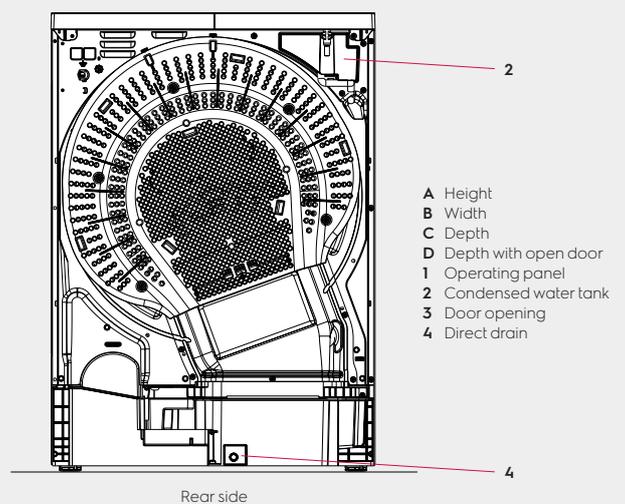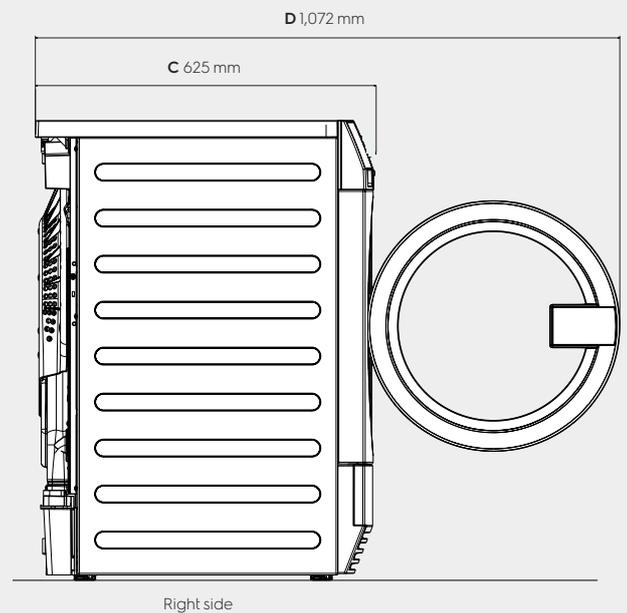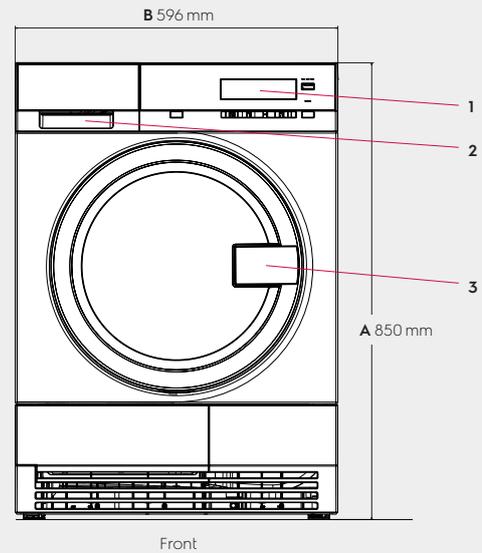

- A Height
- B Width
- C Depth
- D Depth with open door
- 1 Operating panel
- 2 Condensed water tank
- 3 Door opening
- 4 Direct drain

We reserve the right to alter specifications without notice.